



MAVERICK SERIES PARTS DESCRIPTION



WWW.STARRAINBOW.COM.TW

1. Gas Injection



1. Press the Magazine Catch.
2. Remove the Magazine.



- Keep the gas cylinder inverted and vertical to the Magazine. Inject gas until completely filled.

2. Loading BBs




3. Hop-Up Adjustment



3. Remove the Slide.

Remove the Outer Barrel

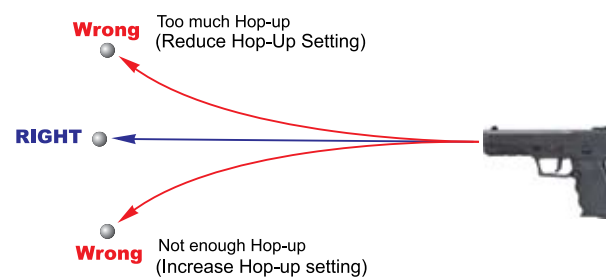

Parts List

| NO. | DESCRIPTION |
|-----|-----------------|
| M1 | MAGAZINE LIP |
| M2 | MAGAZINE RUBBER |
| M3 | MAGAZINE FRAME |
| M4 | VALVE |
| M5 | MAGAZINE SEAL |
| M6 | MAGAZINE BASE |
| M7 | GAS VALVE |
| M8 | PIN |
| M9 | SPRING |
| M10 | BB FOLLOWER |
| M11 | SPRING GUIDE |
| M12 | GAS TUBE |

| NO. | DESCRIPTION |
|------|----------------------|
| A1 | Air Nozzle |
| A2 | Air Nozzle Base |
| 1 | SLIDE(57) |
| 1-1 | SLIDE(MAV) |
| 2 | SLIDE BASE |
| 3 | REAR SIGHT SET |
| 4 | BARREL FIXING RINGS |
| 5 | RECOLIL SPRING |
| 6 | BARREL |
| 7 | HOP UP BUCKING |
| 8 | HOP UP CHAMBER |
| 9 | HOP UP BUCKING BASE |
| 10 | RECEIVER FRAME(57) |
| 10-1 | RECEIVER FRAME(MAV) |
| 11 | TRIGGER SET |
| 12 | SLIDE LOCK |
| 13 | SLIDE CATCH |
| 14 | SAFTY LEVER-R |
| 15 | SAFTY LEVER-L |
| 16 | RAIL FIX |
| 17 | SLIDE RELEASE BUTTON |
| 18 | HAMMER SET |
| 19 | MAGAZINE CATCH |
| 20 | PIN-A |
| 21 | PIN-B |
| 22 | PIN-C |

