


⚠ WARNING

- ▲ When using airsoft guns eye protection is required.(goggles or mask)
- ▲ Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲ Please keep away from children.
- ▲ BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲ Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲ Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲ Do not aim or shoot at humans, animals, buildings, or vehicles.
- ▲ Please use a firearm case or bag when transporting your airsoft gun.


PARTS DESCRIPTION

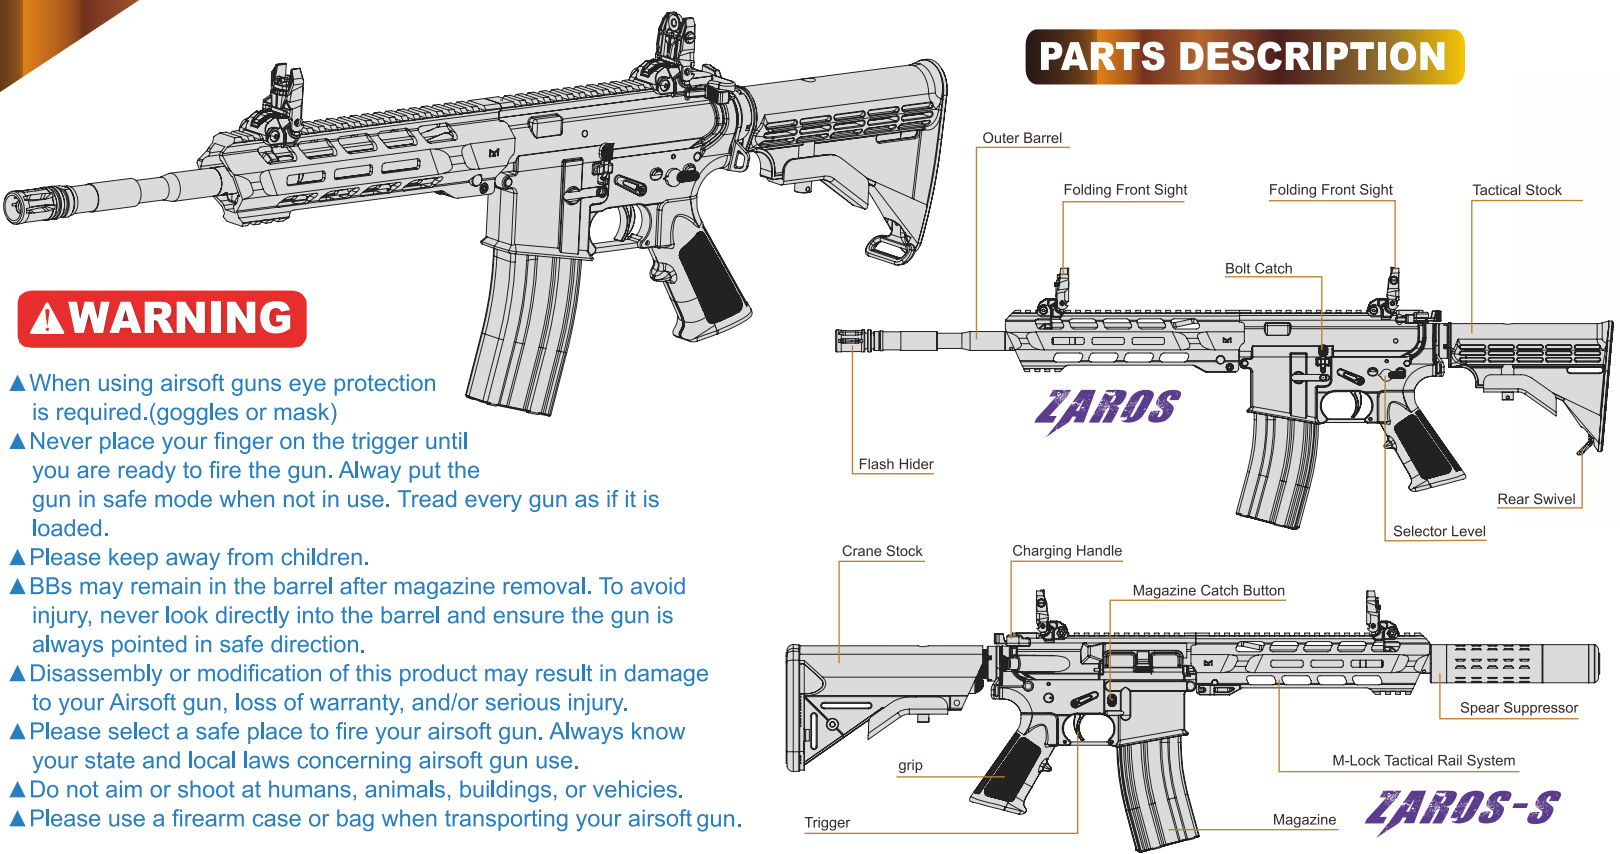

GAS INJECTION


For Gas Magazine

STEP 1

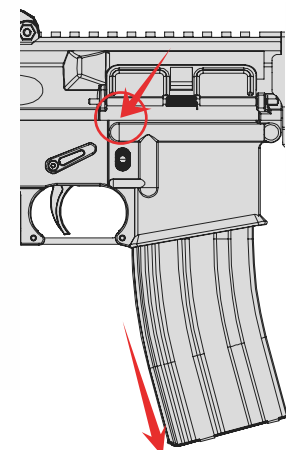


1. Turn the Safety Lever Selector to safe mode

STEP 2

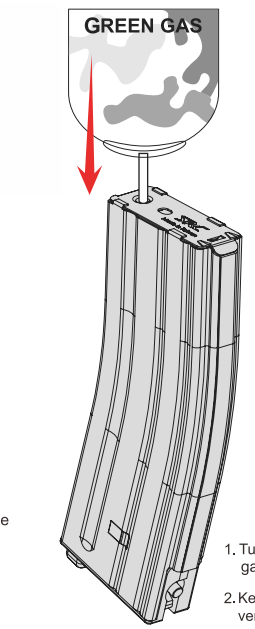

2. Press the Magazine Catch.

STEP 3

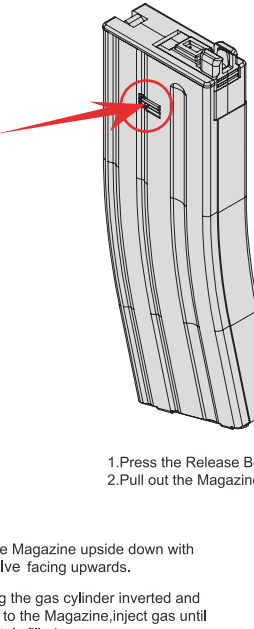


3. Remove the Magazine.

INSTALL CO2 CARTRIDGE


For CO2 Magazine

STEP 1

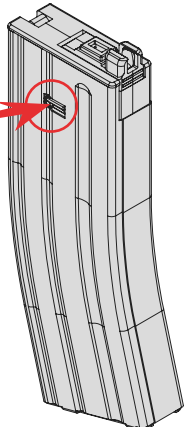


1. Press the Release Button.

STEP 2

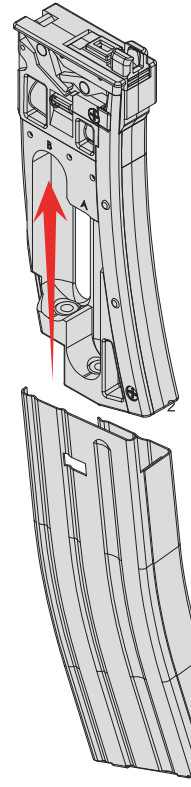

2. Pull out the Magazine Frame.

STEP 3

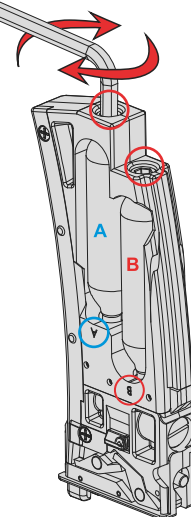


3. Loading two CO2 Cartridge. Lock the puncture screws. (Only Load Slot A first)

⚠ WARNING!


Do not installed slot B first

LOADING BBS

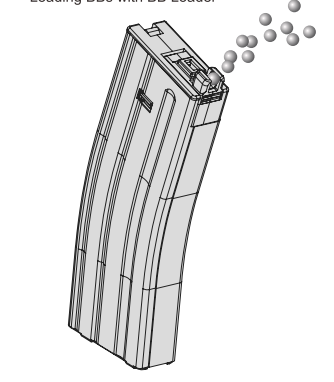


SHOOTING


SAFE MODE

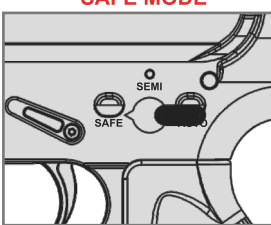


SEMI MODE

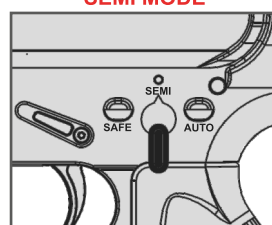

AUTO MODE

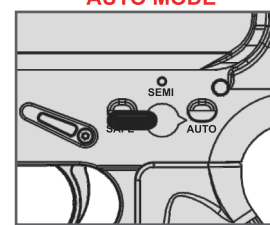

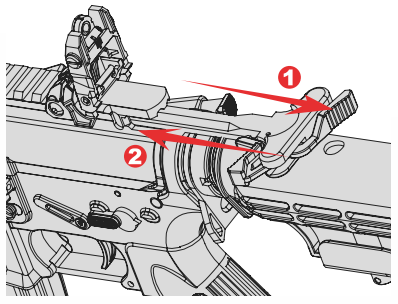


1. Pull the charging handle to rear and release. The gun is ready to fire.

HOP-UP ADJUSTMENT


Disassemble the tactical handguard

1. Remove the pin.
2. Release Q.D.lever.
3. Pull the handguard forward.
4. Adjust the hop-up.
5. SD Version must remove the Spear Suppressor first.

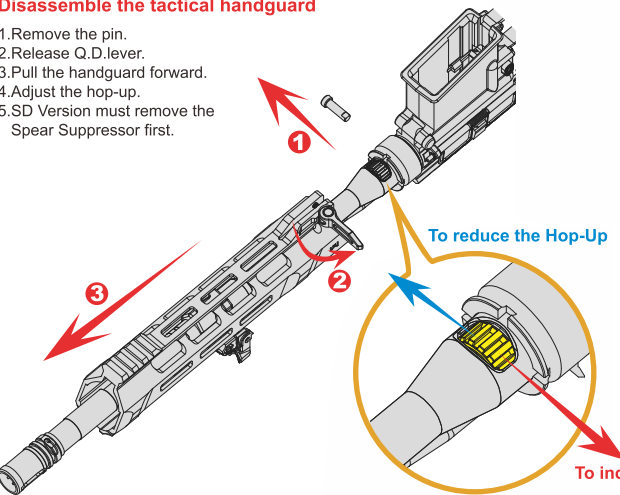

To reduce the Hop-Up

To increase the Hop-Up

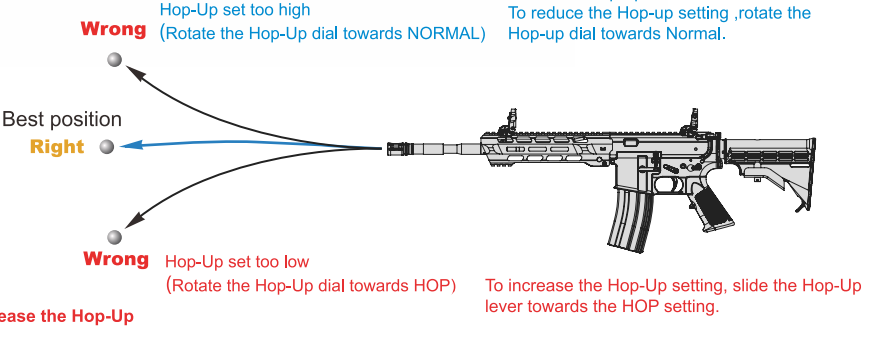

Wrong Hop-Up set too high (Rotate the Hop-Up dial towards NORMAL)


Best position Right

Wrong Hop-Up set too low (Rotate the Hop-Up dial towards HOP)


To increase the Hop-Up setting, slide the Hop-up lever towards the HOP setting.

FIELD STRIP

1. Remove locking pins.
2. Disassemble Upper Receiver with lower receiver.
3. Lubricate the hammer set .
4. Lubricate the air nozzle .

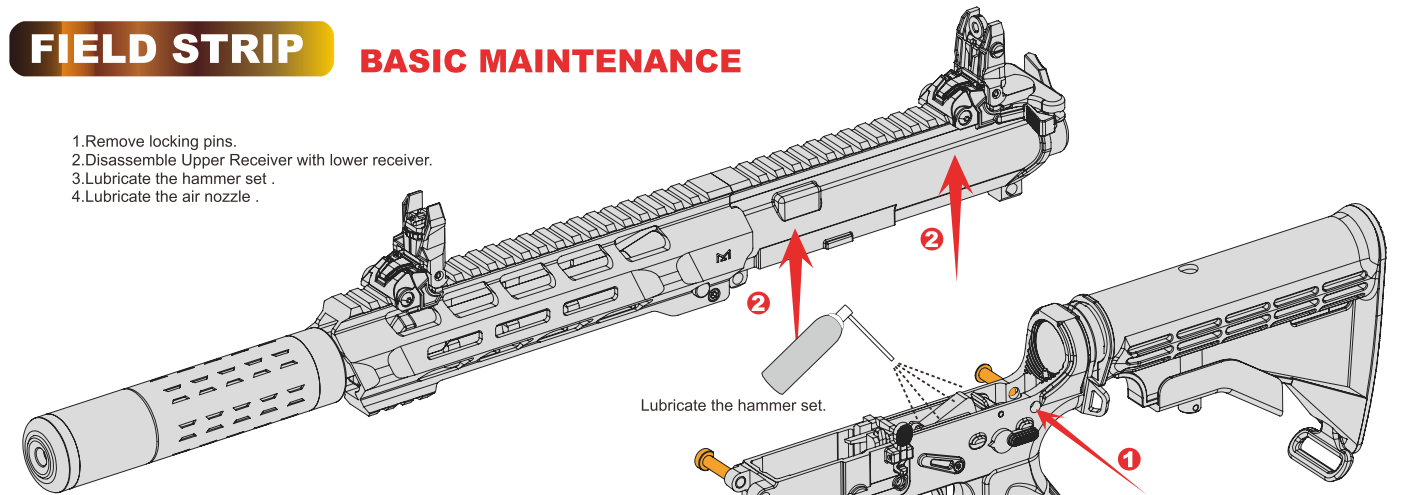

2. Lubricate the hammer set.

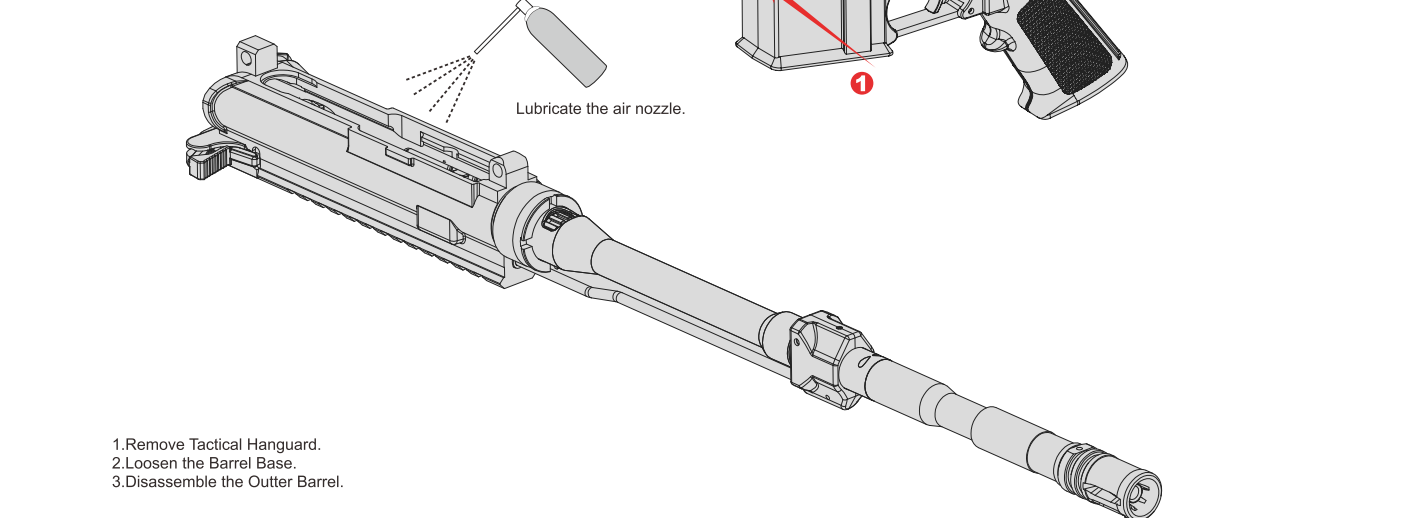

1. Lubricate the air nozzle.

BASIC MAINTENANCE


1. Remove Tactical Hanguard.
2. Loosen the Barrel Base.
3. Disassemble the Outter Barrel.



www.starrainbow.com.tw
sales@starrainbow.com.tw


TROUBLESHOOTING

PROBLEM : GBB GUN DOES NOT FUNTION

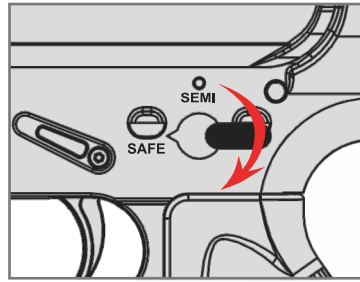


Made sure gun is not in safe mode

Turn the selector lever to semi or full auto mode and attempt to fire.

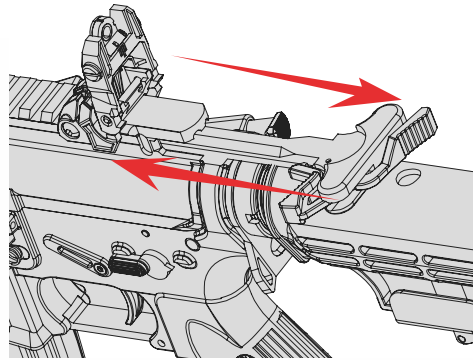


Problem: Not Charging

Make sure the gun is load. Pulling charging handle to the rear and releasing.

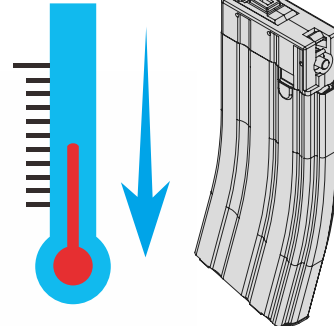

Problem: Magazine temprature is low


If the magazine is too cold, It may not function properly. Stop shooting and let the magazine warm up.

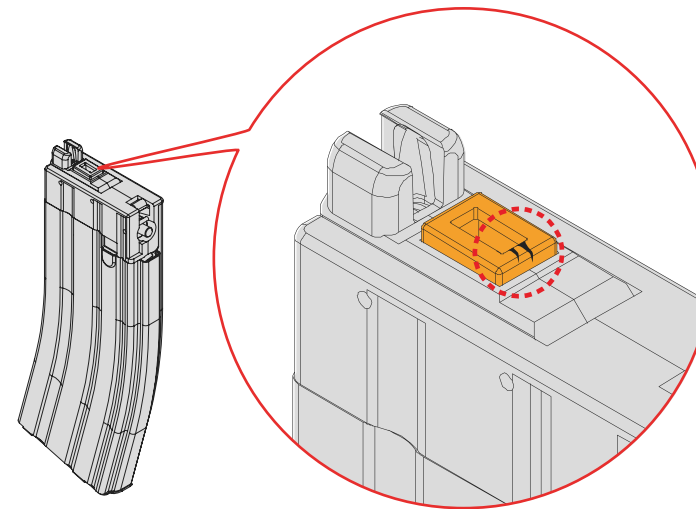

Problem: Nozzle rubber aged or broken


Replace the Air nozzle rubber. Contact your local dealer or reseller for SRC replacement parts.

PROBLEM: JAMMING BBs

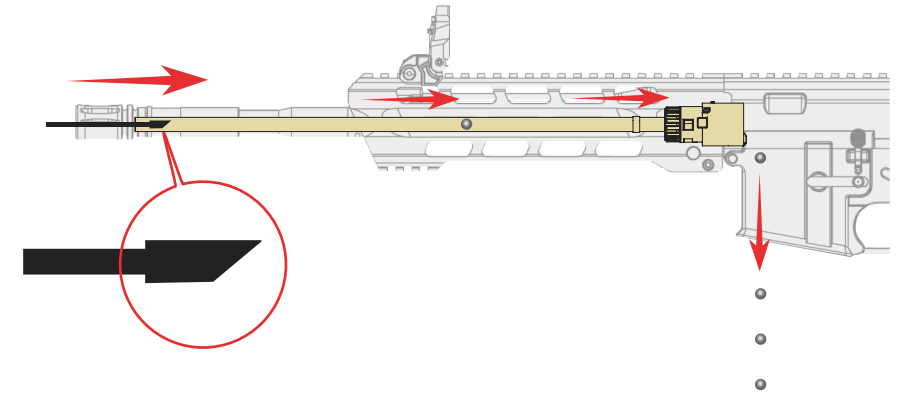

- 1.Remove the magazine.
- 2.Insert the cleaning rod into the barrel to remove the jammed BBs.
- 3.Turn off the hop-up by moving the hop up lever all the way towards the Normal setting. Use the standend end of the cleaning rod.

SCHEMATIC (DUAL POWER SYSTEM)

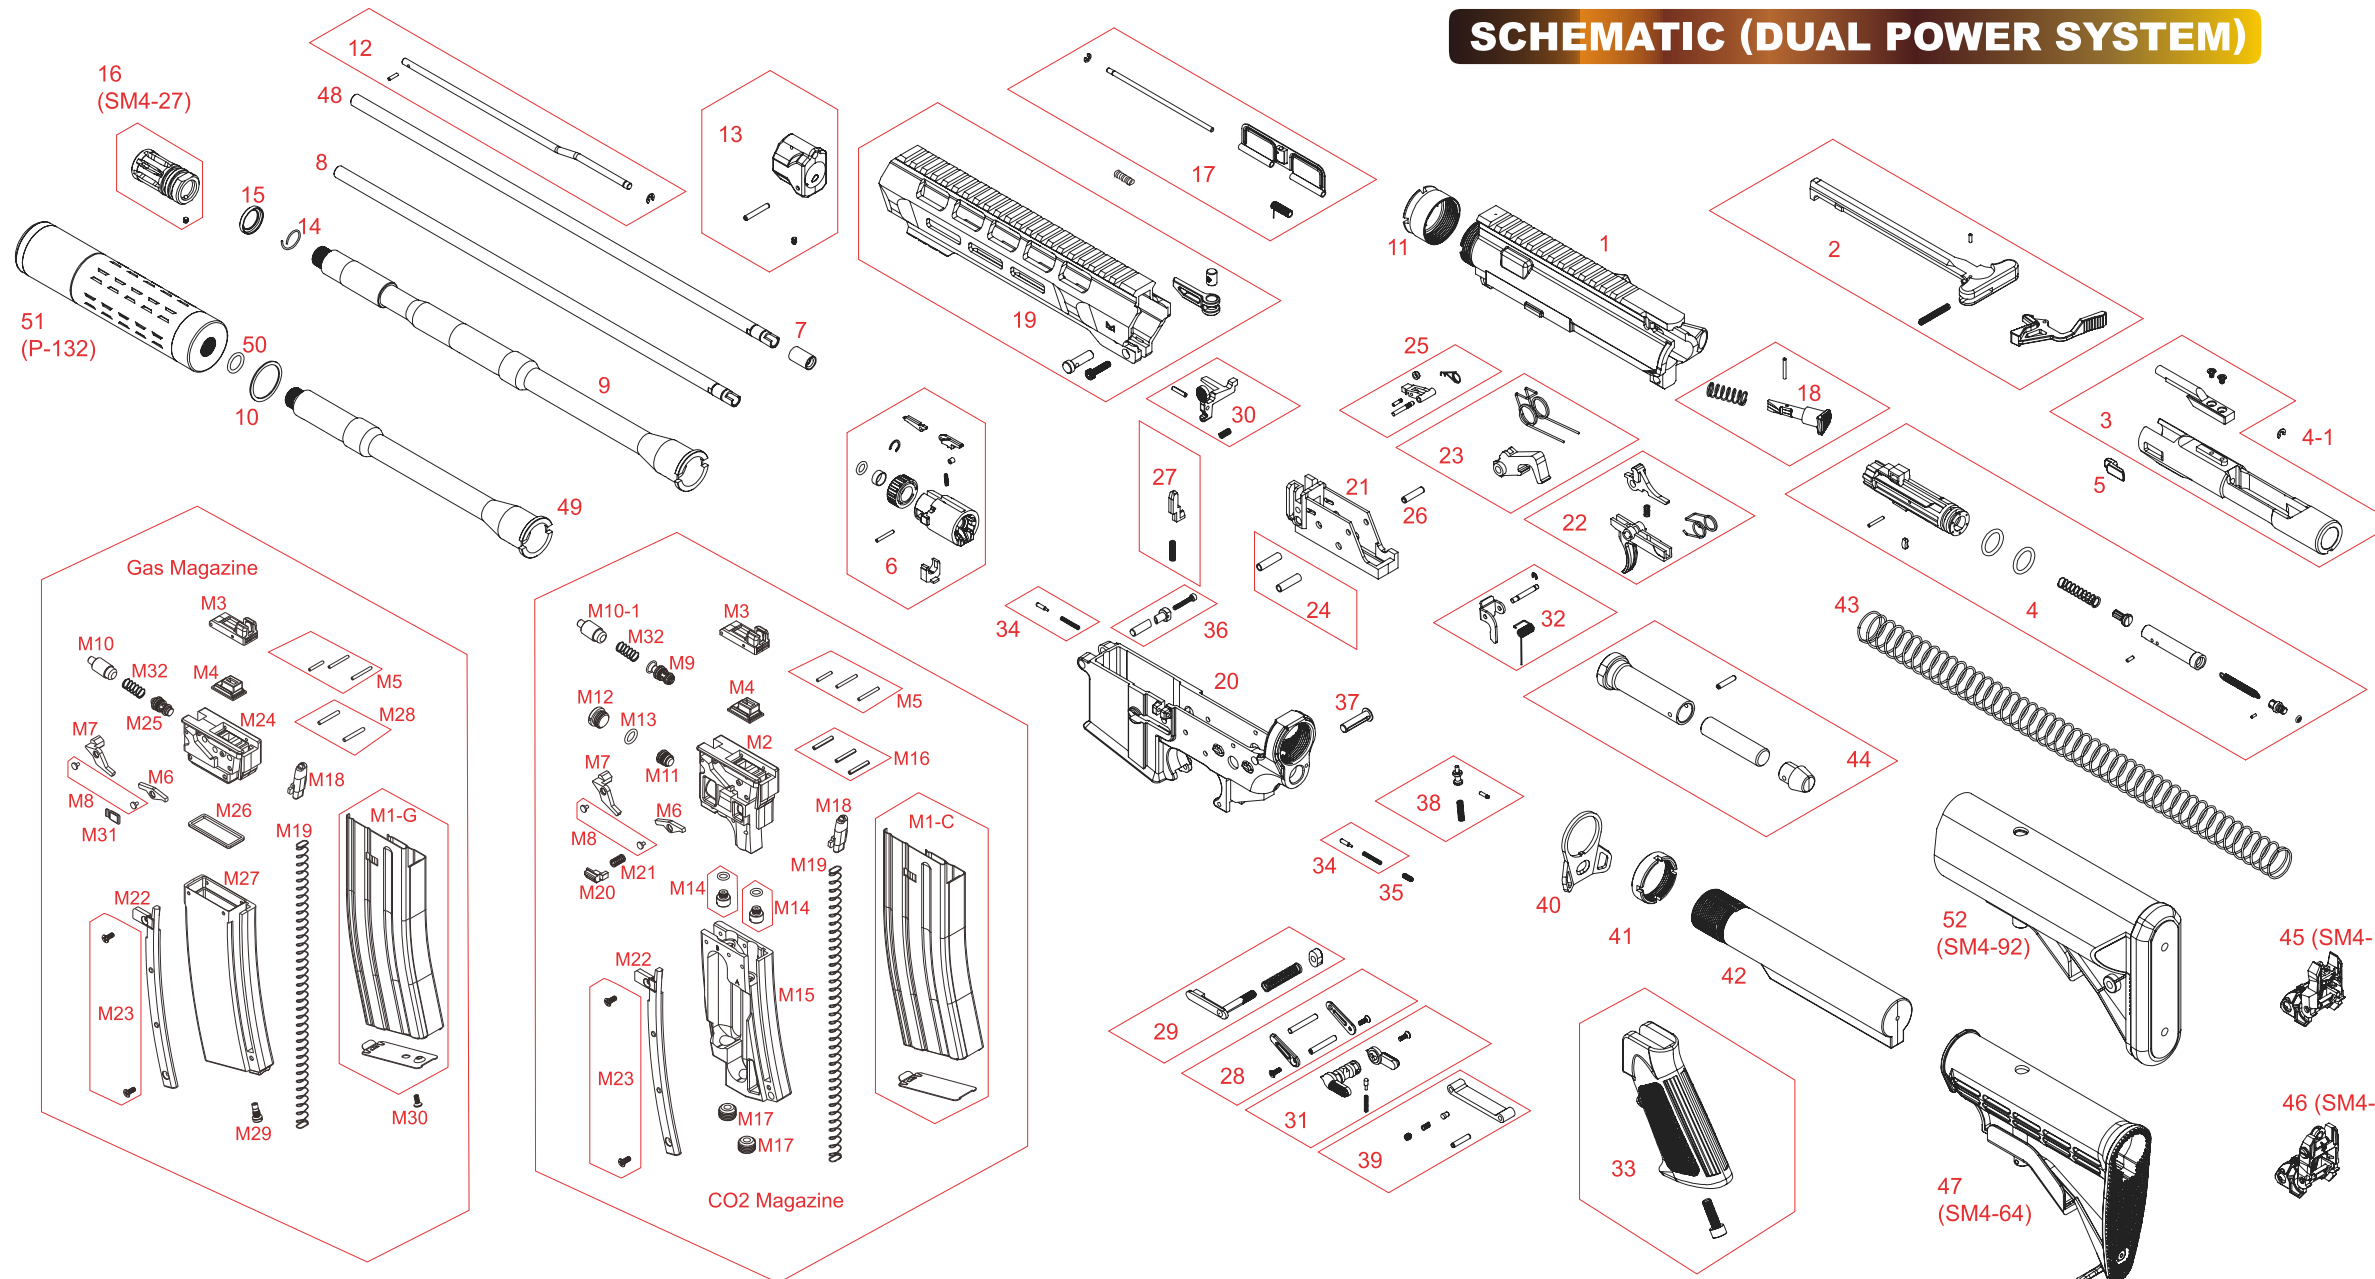

Magazine Parts List

NO.	DESCRIPTION
M1-C	CO2 Magazine Shell
M1-G	GAS Magazine Shell
M2	Magazine Valve Base
M3	Magazine Lip
M4	Air Nozzle Rubber
M5	Pin Set
M6	Lever
M7	Lever
M8	Screw Set
M9	CO2 Magazine Valve
M10	Valve Extension
M10-1	Valve Extension
M11	Check Valve
M12	Seal Screw
M13	O Ring
M14	Cartridge Stab
M15	CO2 Magazine Frame
M16	Magazine Spring
M17	Screw
M18	Magazine Bar
M19	Magazine Spring
M20	Release Button
M21	Spring
M22	BB Rail Cover
M23	Screw Set
M24	Magazine Valve Base
M25	Gas Magazine Valve
M26	O Ring
M27	Gas Magazine Frame
M28	Pin set
M29	Inlet Valve
M30	Screw
M31	Cover
M32	Spring

Rifle Parts List

NO.	DESCRIPTION
1	Upper Receiver
2	Charging Handle set
3	Bolt set
4	Air Nozzle set
4-1	Circlips
5	Air Nozzle block
6	Hop-Up Chamber
7	Hop-Up Bucking
8	Inner barrel (Zaros)
9	Outer barrel (Zaros-S)
10	Washer
11	Barrel Base
12	Gas Tube set
13	Gas Block
14	Spring
15	Flash Hider Washer
16	Flash Hider
17	Ejection Port Cover set
18	Forward Assist Plunger
19	M-LOK Tactical Rail Handguard
20	Lower Receiver
21	Hammer Base
22	Trigger set
23	Hammer set
24	Pin
25	Firing Pin set
26	Pin
27	Disconnecter
28	Hammer and Trigger Pins
29	Magazine Catch
30	Bolt Catch
31	Safety Selector
32	Pistol Grip
33	Pistol Grip Screw
34	Pin set
35	Screw
36	Pin set
37	Pin
38	Buffer Retainer
39	Trigger Guard
40	Buttstock Tube Lock
41	Receiver Extension Nut
42	Buffer Tube
43	Buffer Spring
44	Buffer Assembly
45	Folding Front Sight
46	Folding Rear Sight
47	Stock (Zaros)
48	Inner barrel (Zaros-S)
49	Outer barrel (Zaros)
50	O Ring
51	Spearg Suppressor
52	Crane Stock