
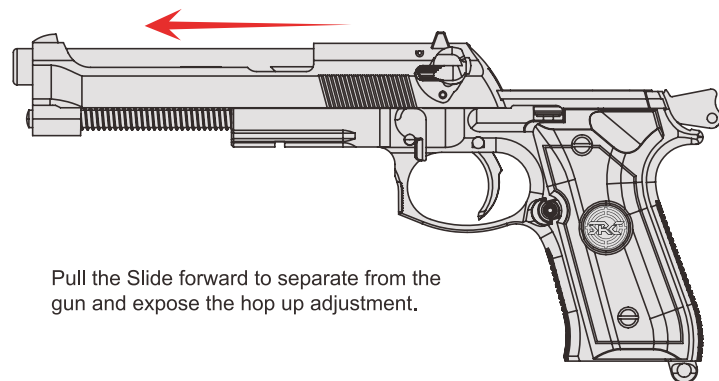



⚠ WARNING

- ▲ When using airsoft guns eye protection is required.(goggles or mask)
- ▲ Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲ Please keep away from children.
- ▲ BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲ Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲ Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲ Do not aim or shoot at humans, animals, buildings, or vehicles.
- ▲ Please use a firearm case or bag when transporting your airsoft gun.

DISAEMBLE SLIDE


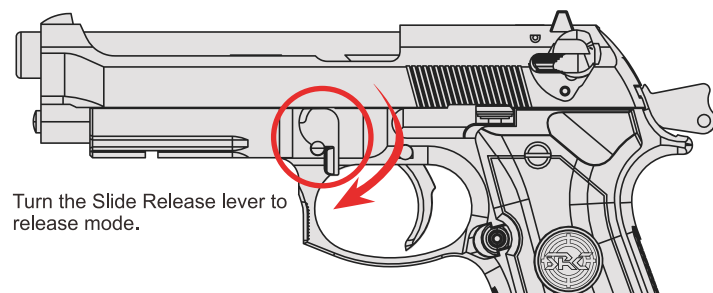


SR92 PARTS DESCRIPTION

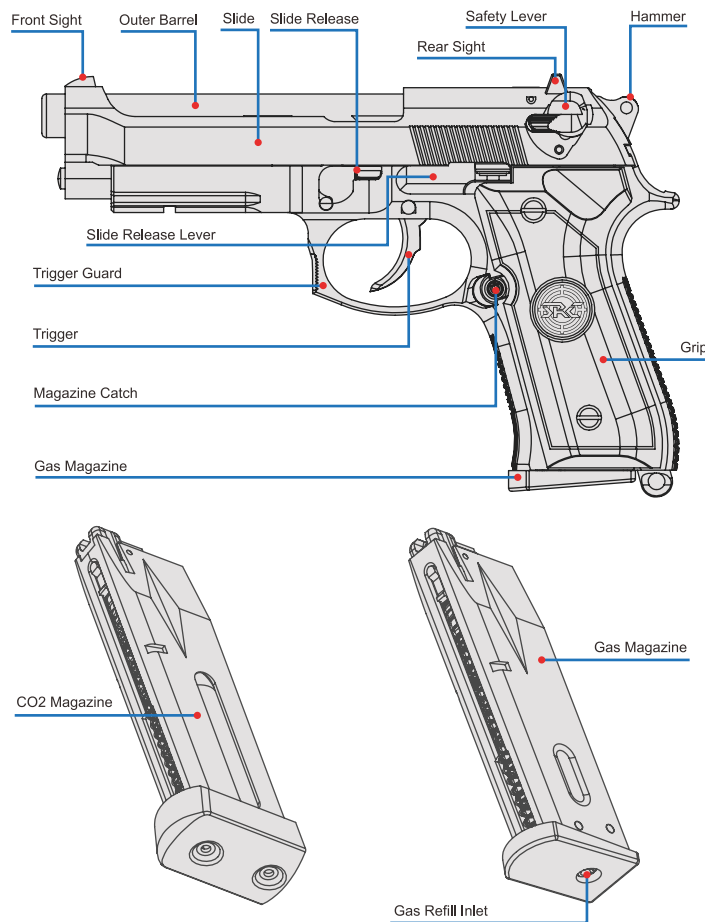


GAS INJECTION


Safety and Magazine Removal

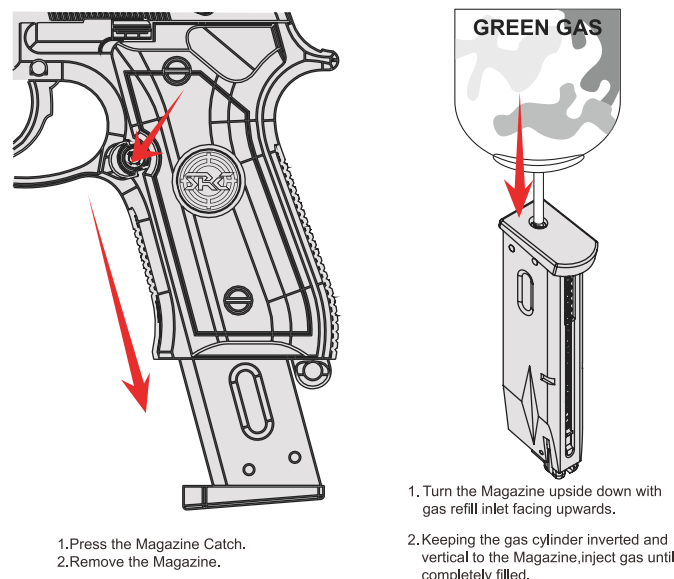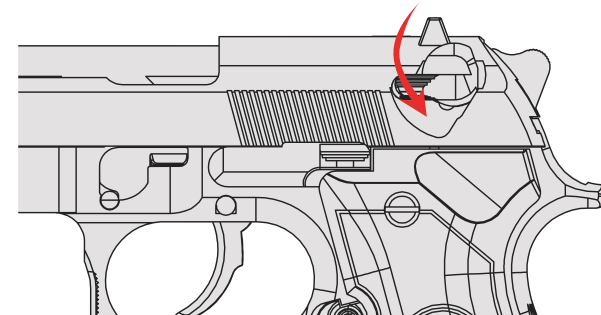


INSTALL CO2 CARTRIDGE

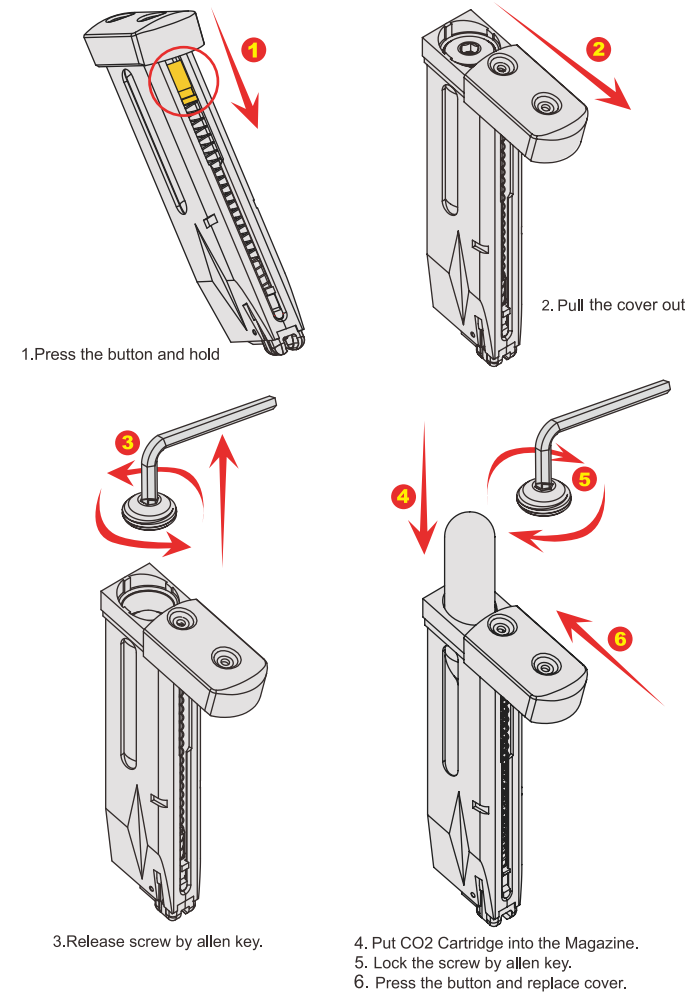

HOP-UP ADJUSTMENT

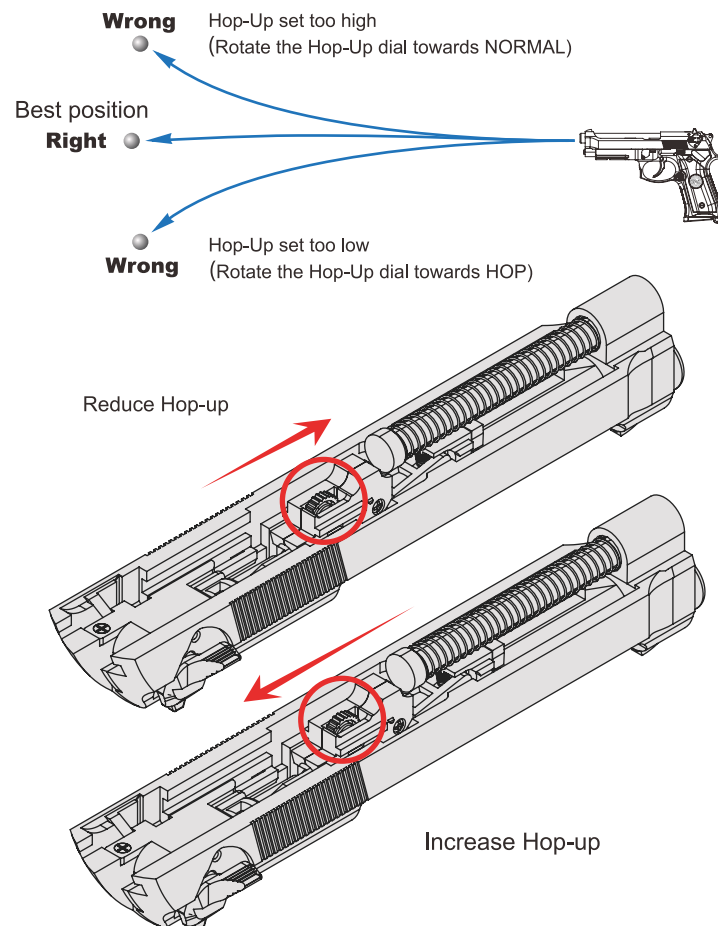

SR92 SCHEMATIC (DUAL POWER SYSTEM)

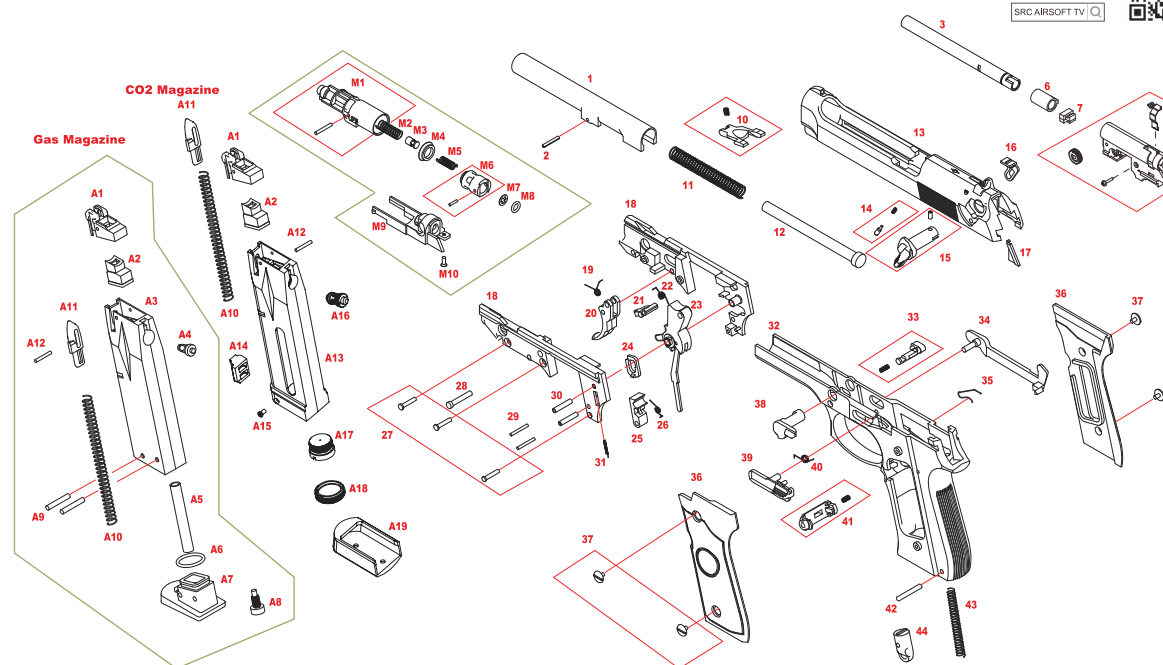

NO	DESCRIPTION
1	Outer Barrel
2	Barrel Pin
3	Inner Barrel
6	Hop Up Bucking
7	Cushion
8	Hop Up Chamber
10	Barrel Lock
11	Recoil Spring
12	Recoil Spring Guide
13	Slide
14	Safety Lever Lock
15	Safety Lever - L
16	Safety Lever - R
17	Safety Lever Bar
18	Trigger Base
19	Trigger Spring
20	Trigger
21	Hammer lever
22	Hammer lever Spring
23	Hammer
24	Stop Plate
25	Shear
26	Shear Spring
27	Screw

NO	DESCRIPTION
28	Trigger Pin
29	Pin
30	Brass Tube
31	Stop Plate Spring
32	Frame
33	Slide Release Button
34	Trigger Link
35	Trigger Spring
36	Grip Panel

NO	DESCRIPTION
37	Grip Screw
38	Slide Release lever
39	Slide Stop
40	Slide Stop Spring
41	Magazine Release Button
42	Pin
43	Hammer Spring
44	Hammer Spring Cover

Air Nozzle set	
NO	DESCRIPTION
M1	Air Nozzle
M2	Air Valve Spring
M3	Air Valve
M4	Piston Ring
M5	Air Nozzle Spring
M6	Piston
M7 / M8	CS / O Ring
M9	Cylinder Base
M10	Screw


Magazine set	
NO	DESCRIPTION
A1	Magazine Lip
A2	Air Nozzle Rubber
A3	Magazine Frame
A4	Valve
A5	Nebulization Tube
A6	O Ring
A7	Gas Magazine Base
A8	Gas Valve
A9 / A12	Pin

Magazine set	
NO	DESCRIPTION
A10	Magazine Spring
A11	Magazine Bar
A13	CO2 Magazine Frame
A14	Magazine Frame Stopper
A15	Screw
A16	CO2 Magazine Valve
A17	Cartridge Stab
A18	CO2 Cartridge Cap
A19	Magazine Bottom

DUAL POWER FULL AUTO VER.

⚠ WARNING

- ▲ When using airsoft guns eye protection is required.(goggles or mask)
- ▲ Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲ Please keep away from children.
- ▲ BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲ Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲ Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲ Do not aim or shoot at humans, animals, buildings, or vehicles.
- ▲ Please use a firearm case or bag when transporting your airsoft gun.

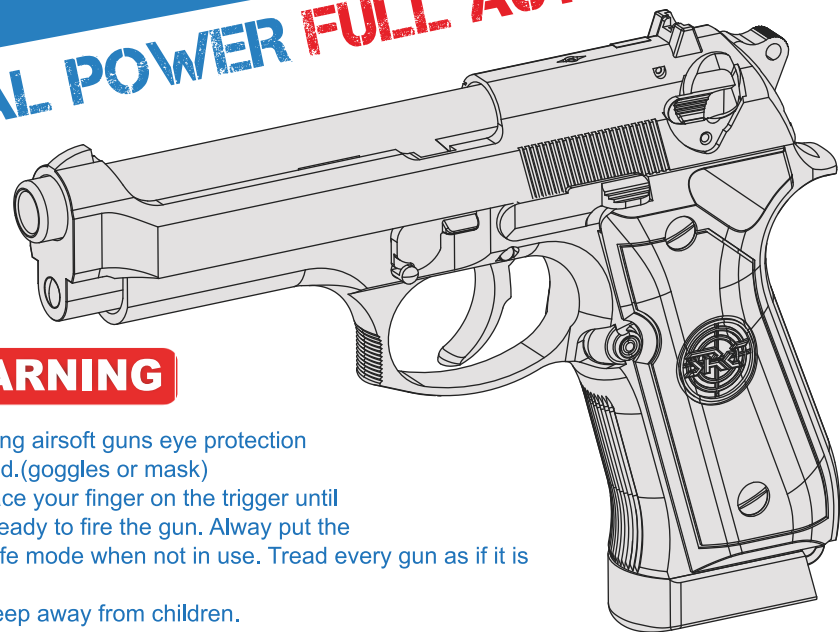


SHOOTING MODE


SAFE MODE



SEMI AUTO MODE

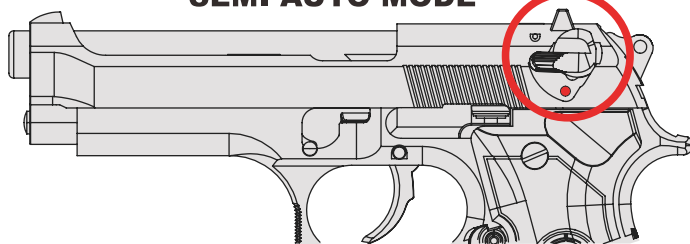

FULL AUTO MODE

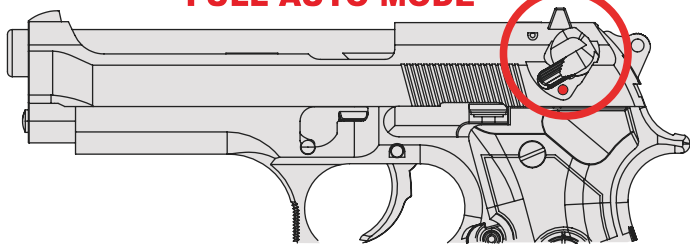

GAS INJECTION

GREEN GAS

SR92-M-EX
Extend Gas Magazine
(Optional)

1. Turn the Magazine upside down with gas refill inlet facing upwards.
2. Keeping the gas cylinder inverted and vertical to the Magazine, inject gas until completely filled.

INSTALL CO2 CARTRIDGE

SR92-COM-EX
Extend CO2 Magazine
(Optional)

1. Push the cover out.
2. Release screw by allen key.


3. Put CO2 Cartridge into the Magazine.
4. Lock the screw by allen key.
5. Replace the cover.

SR92 SCHEMATIC FULL AUTO Ver. (DUAL POWER SYSTEM)

SR92-M-EX (Optional)
Gas Magazine

SR92-COM-EX (Optional)
CO2 Magazine

NO	DESCRIPTION
A1	Magazine Lip
A2	Air Nozzle Rubber
A3-EX	Gas Magazine Frame
A4	Valve
A5	Nebulization Tube
A6	O Ring
A7	Gas Magazine Base
A8	Gas Valve
A9 / A12	Pin
A10-EX	Magazine Spring
A11	Magazine Bar
A13-EX	CO2 Magazine Frame
A14	Magazine Frame Stopper
A15	Screw
A16	CO2 Magazine Valve
A17	Cartridge Stab
A18	CO2 Cartridge Cap
A19-EX	CO2 Magazine Bottom
A20-EX	GAS Magazine Bottom Shell

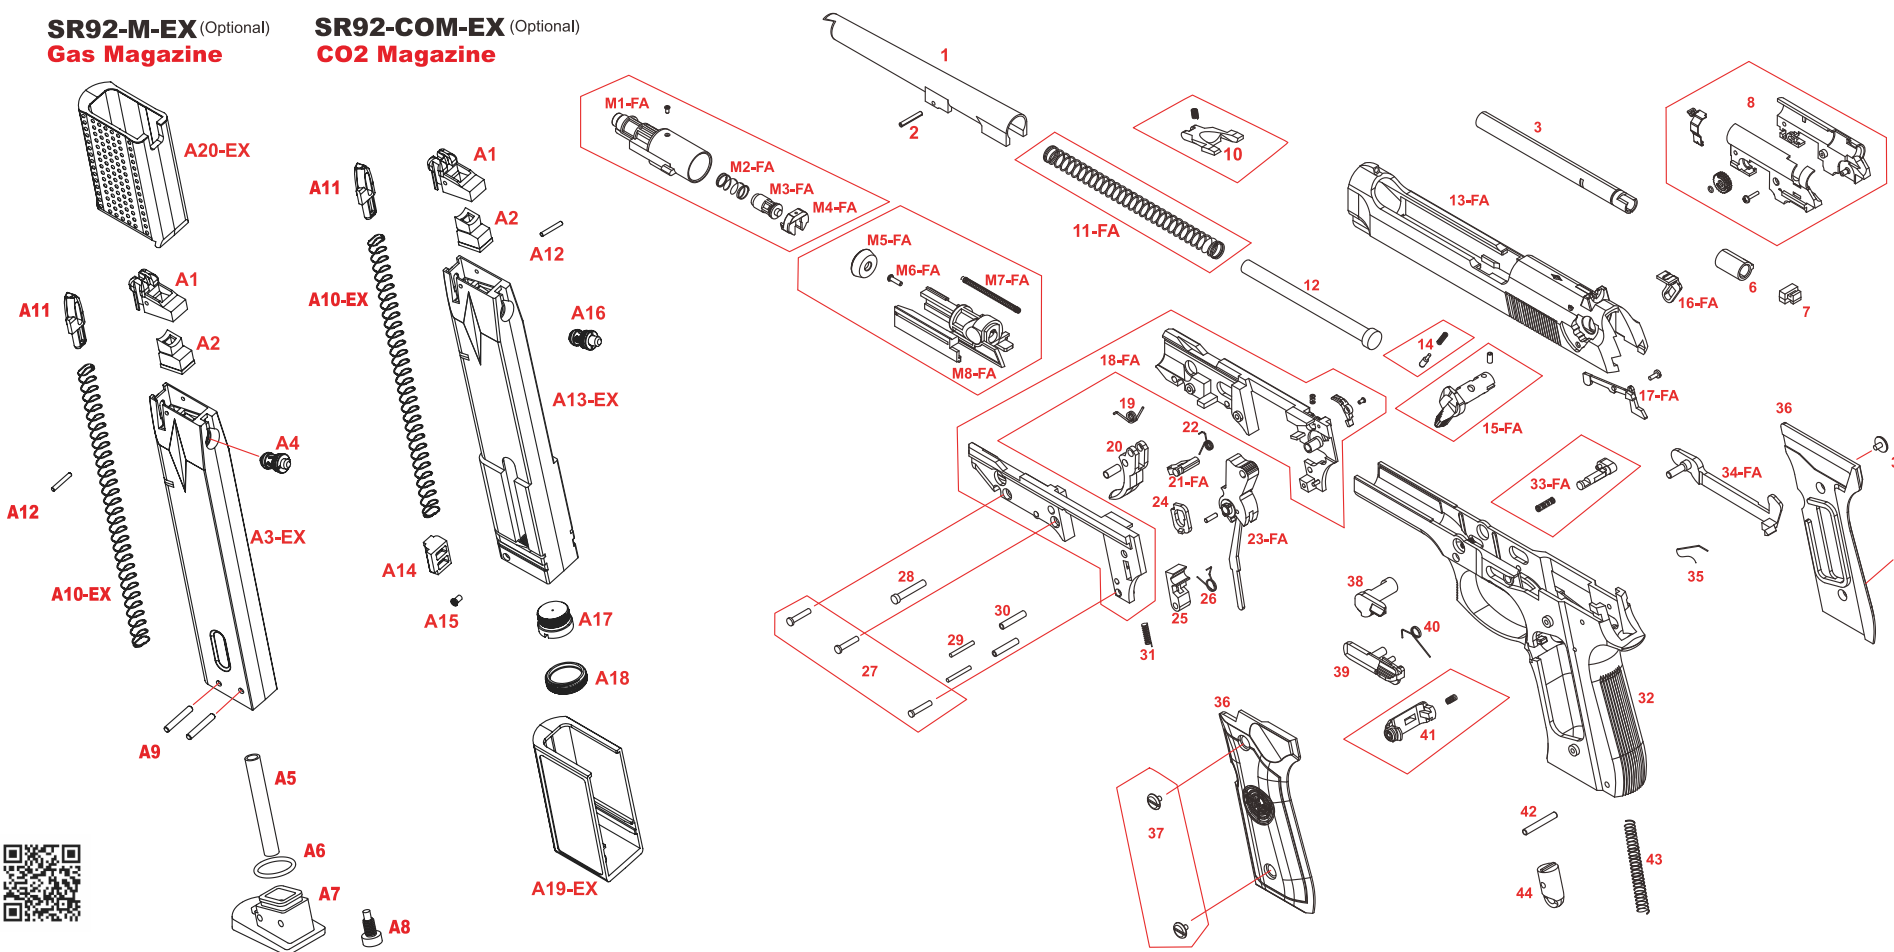

NO	DESCRIPTION
1	Outer Barrel
2	Barrel Pin
3	Inner Barrel
6	Hop Up Bucking
7	Cushion
8	Hop Up Chamber
10	Barrel Lock
11-FA	Recoil Spring
12	Recoil Spring Guide
13-FA	Slide
14	Safety Lever Lock
15-FA	Safety Lever - L
16-FA	Safety Lever - R
17-FA	Safety Lever Bar
18-FA	Trigger Base
19	Trigger Spring
20	Trigger
21-FA	Hammer lever
22	Hammer lever Spring
23-FA	Hammer
24	Stop Plate
25	Shear
26	Shear Spring
27	Screw
28	Trigger Pin
29	Pin
30	Brass Tube
31	Stop Plate Spring
32	Frame
33-FA	Slide Release Button
34-FA	Triger Link

NO	DESCRIPTION
35	Spring
36	Grip Panel
37	Grip Screw
38	Slide Release lever
39	Slide Stop
40	Slide Stop Spring
41	Magazine Release Button
42	Pin
43	Hammer Spring
44	Hammer Spring Cover

Air Nozzle set

NO	DESCRIPTION
M1-FA	Air Nozzle
M2-FA	Air Valve Spring
M3-FA	Air Valve
M4-FA	Piston Spring
M5-FA	Piston
M6-FA	Screw
M7-FA	Spring
M8-FA	Cylinder Base