




SR92 OPTIC READY SERIES REPLACE FRONT SIGHT

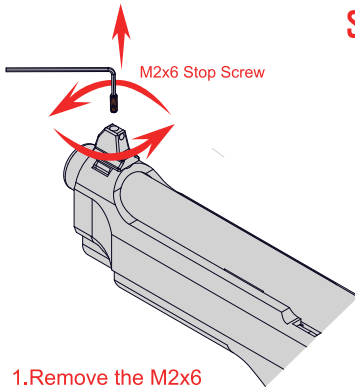


1.Remove the M2x6 Stop screw.

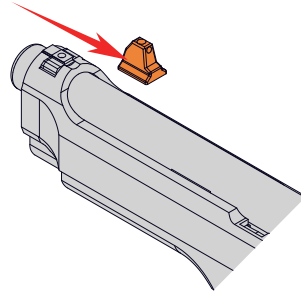

2.Slide out backwards the Higher front sight.

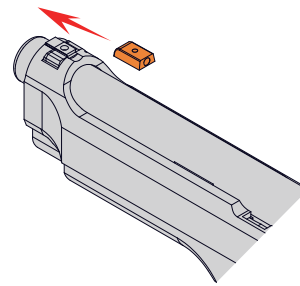

3.Slide forward the shorter front sight.

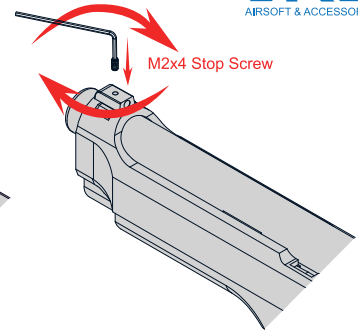


4.Locking the M2x4 Stop screw.

INSTALL THE RED DOT SIGHT


SR92 OPTIC READY SERIES
ADAPTER SUPPORT

- 1.DOCTOR FOOTPRINT(M3)
- 2.TRIJICON FOOTPRINT(6-32 UNC)

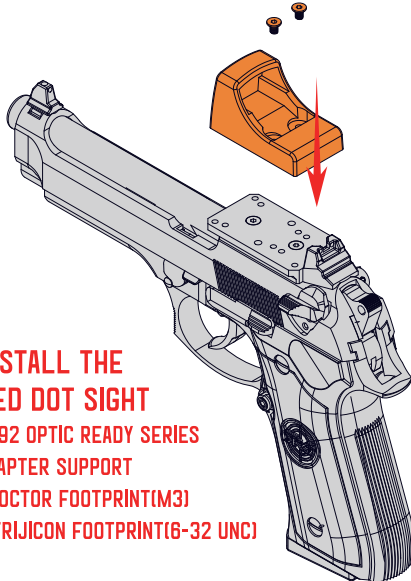

REMOVE THE ADAPTER

- 1.Remove the screw.
- 2.Remove the Adapter.

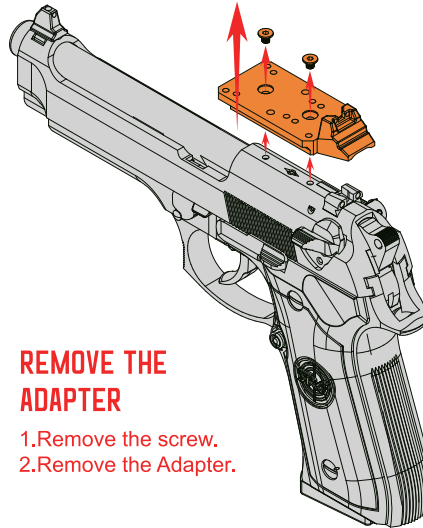

CONVERT TO STANDARD MODE

